




# NATIONAL FIRE EQUIPMENT LTD.

SERVICE, SOLUTIONS, INNOVATION

## CYL-87100 PARTS LIST & INSTALLATION INSTRUCTIONS

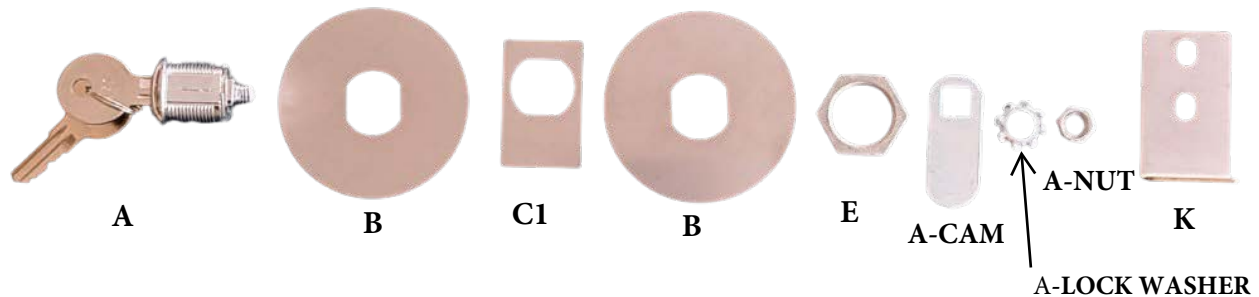

### Parts List

- A:** Cylinder lock & key
- B:** S.S. round washer (2)
- C1:** S.S. square washer
- E:** Thread nut
- A-CAM:** Cylinder lock & key cam
- A-LOCK WASHER:** Cylinder lock & key lock washer
- A-NUT:** Cylinder lock & key nut
- K:** Angle bracket



### Instructions

- Install C1 into rectangular hole in door.
- Slide A into B and install into C1 from the front of door.
- On back side of door install another B and secure E holding everything into place.
- On the back of lock install A-CAM, A-LOCK WASHER AND A-NUT and tighten.
- Install K on the side of the cabinet (screws not supplied). This will allow A-CAM to securely hold on it keeping the door closed. Adjustment will be required. This step is difficult and may require the glass to be removed in order to do proper install of K and adjustment.